







	DC-WP10	DC-WP20	DC-WP100	DC-WP400	DC-WP1	DC-WP300
Canon	<i>(IXUS. IXY)</i> 810S/950IS 600/500/450 430/400/330 300a/300 <i>(Powershot)</i> S60/70/80/300/330 400/ 410 A70/75/80/85/95 100/200/300/310 400/410/420/430 450/460/470/850IS	<i>(IXUS. IXY)</i> 40/50/55/60/65/70/75 /80S/85S/90S/400/430 /500/700/750/800S/ 850S/860S/950S/960S /970S/1000/900T iZoom/IS/ II/ II s/V2/V3 <i>(Powershot SD)</i> 200/300/400/500/ 550/600/630/650 700/800/900/950S/ 1000/2000IS	<i>(IXUS. IXY)</i> 90/80/75/70/65/60/ 55/50/40/30/10 /i/ii/iii/5/5i/7zoom/izoom/ V3/V2/L/L2/300/330 30a/200a/D320/S100 S200/850S/860S/900S/ 910S/IXY Wireless <i>(Powershot)</i> SD30/40/430/450 600/630/100/110/750/ 800S/870S/1000 S230/200/110/100/300 A400/450/460/550	<i>(Powershot SD)</i> A10/20/30/40 50/60/70/75 80/85/95 510/520/530 540/550/560/ 570S/580/590IS 610/620/630/640 700/710IS 720IS S45/5060/70/80		<i>(Powershot)</i> G9. G7. G6. G5. A710 IS. A640. A630. A620. A610. A650 IS. A720 IS. A700
Nikon	<i>Coolpix</i> 2200/3200/3700 4100/4200/4600 5200/5600/5900 7600/7900 P1/2/3/4/60 L2/3/4/6/16/18	<i>Coolpix</i> S200/210/500/510/ 520/550/600/700 L2/3/4/6/10/11/12/ 14/1516/18	<i>Coolpix</i> 3700/4100/4600 S100/200/500 L10/11/12	<i>Coolpix</i> 2000/2100/2200/ 3100/3200/4100/ 4300/4800/5000/ 5100/5400/8400/885 P1/2 /50/5000/5100 L1/5	<i>Coolpix</i> 2500/3500 S1/2/3/5/6/7/7c/ 8/9/50/50c/51/ 51c/52/52c	
SAMSUNG	<i>(Kenox, Digimax)</i> V3/4/5/6/700/800 A4/5/6/7/40/50/400 D4/5/6/7/103 V5/6/10/20/50 Cyber410, X80 VLUUNV10/NV8/ 20/15 S85/800/1000	<i>(Kenox, Digimax)</i> X70 L60/70/73/74w/77/ 700 NV10/11/20/24HD S630/700/1000/ 1030/1050	<i>(Kenox, Digimax)</i> U-GA5/4/3 X1/115wide/60/80 Q1/2/25wide L50/L55W/A55W/60/ 73/L74wide/L80/700 A50W S500/600/630/700/ 730/830/850/1030 VLUUL730/830	<i>(Kenox, Digimax)</i> 360/370/420/430 530/V50/V70 D60/370/430/470 510/530/610/3000 3100/4000 a5/7/LUX4 Cyber300/400 X85	<i>(Kenox, Digimax)</i> #1/#1mp3 #11PMP I5/I50mp3 I6PMP/I7 K50/D512S VLUU NV3/L83T/ i7/i85/i6/i8/i70	
OLYMPUS	<i>Camedia</i> C-500Z/480Z/370 60Z/315/470Z/ X-450/350/550 1/2/3 FE120/170/310 <i>(m, Stylus)</i> 500/D-535/545/800 595Z	<i>Camedia</i> C-170/180/470Z/600/ 500 FE-5500/150/160/180/ 190/200/230/300/320/ 330/340/350 <i>(m, Stylus)</i> 710/740/750/760/300/ 400/410/1000/780/600/ 700/810/1000/1200 D-630Z	<i>Camedia</i> FE-130/140/170/180 200/210/220/230/240/ 250/270/280/290 C-315Z/310Z <i>(m, Stylus)</i> 10/15/20/25/30/40 40digital/300/400/500 /600/700/780/800/ 820/830 Digital S/Min/Verve S	<i>Camedia</i> C1Z/2/40/70Z/350Z 460/7000Z/5000Z/ 5500S2 X-200/250 FE100/110 <i>(m, Stylus)</i> 500/D-535/545 595Z SP310/320/350	<i>Camedia</i> AZ 1 FE 5500 LR 300 SP 700 <i>(m, Stylus)</i> 700swi/720sw 725sw/730sw 850sw/1030sw	
FUJIFILM	<i>Finepix</i> A345/350/600/850 E10Z/11/20/30/47 420/650/401Z/410Z/ 420Z/31fd/40fd/45fd/ 50fd E550/900Z	<i>Finepix</i> F440Z/450Z/455Z/10Z/ 100fd/11Z/20Z/30Z/ 40fd/460/47fd/470/ 480/50fd/700/31fd A203/303/345Z/350Z/ 400/500 J10/50 V10	<i>Finepix</i> A340/330/310 303/203/700/600/ 500/510/610/800 E460/470/480	<i>Finepix</i> 2600Z/2650 A600/610/820/ 900/920 E601Z/610Z E500/510/900 M 603	<i>Finepix</i> 30i/40/50i Z1/Z3/5fd/10fd/ 100fd/20fd/200fd A101/200/201 F 402	
PENTAX	<i>(Optio)</i> 30/60/330/430/ 330RS/430RS/550/ 555/ E10/20/30/X S40/45/50/55/60	<i>(Optio)</i> 50 35n/52/67/5/4/10/12/ 4/5/n/v/1/30/40/45/50/ 55/60 T10/20/30/60 A10/20/30/36 E40 L36	<i>(Optio)</i> M10/20/30/40 E10/20/40	<i>(Optio)</i> S30/33L/33LF 330GS/555/ 230/750Z	<i>(Optio)</i> 33WR W 10/20/P/PI	
hp invent	<i>Photosmart</i> M307/407/437/ 527/537 R507/707/717			<i>Photosmart</i> M517/636/735 812/935 R817		

	 DC-WP10	 DC-WP20	 DC-WP100	 DC-WP400	 DC-WP1	 DC-WP500
SONY	<i>(Cybershot)</i> DSC-P100 /120/200/ 72/92 W100/115/7 S800	<i>(Cybershot)</i> DSC-P100 /120/200/ 10/150/2/5/73/8/93 W100/130/150/170/ 200/30/300/35/50/55/ 70/80/90 N1/2 F707 S650/700/750	<i>(Cybershot)</i> DSC-S40 /S600/L1 W30/35/40/50/55 70/80/90/100/200 S500/650/700	<i>(Cybershot)</i> DSC-P1 /2/5/7/9 71/72/92 S60/90/75/85 W1/5/7/12/15 V1	<i>(Cybershot)</i> DSC-T1 /3/5/7/9/10/ 11/20/30/33/50/70/ 100/200/300/2 F717/828/X77 U10/20/30/40 P32/43/51 S40/600	<i>(Cybershot)</i> DSC-S800 ,
Kodak	<i>(Easyshare)</i> LS755/753/633 ONE/C663/C613/ 663 JOC L-108	<i>(Easyshare)</i> VS30/550/803/1003	<i>(Easyshare)</i> C763/743/653/643/ 533 Ls 743 M853/873	<i>(Easyshare)</i> C300/310/330/340/ 360/653/663/813/ X4300/ X4200 DX 3215/3500/3600/3700/ 3900/4330/6340/6440/ 7440/7630 V1003/1273/5502/5702/ 603/610/7502/760 Ls420/443/632/743 Z730/760		<i>(Easyshare)</i> Z1085 IS, Z1285
SANYO	<i>(Xacti VP C)</i> Mz31 S1/3/4	<i>(Xacti VP C)</i> AZ3/MZ3/S6	<i>(Xacti VP C)</i> S60/7/6/4/3/1 E7		<i>(Xacti VP C)</i> A5/E6 J1/2/4	
	<i>(REVIO)</i> KD-200Z/300Z [Dimage] E323	<i>(REVIO)</i> KD-300Z/400Z [Dimage] E40/50/500 F100/200 G400/500/530/600		<i>(Dimage)</i> F100/200/300 S304/404/414 E223 [REVIO]KD-3300	<i>(Dimage)</i> X(X1/X20/X21/X31/ X50/X60/Xg/Xi/Xt	
KYOCERA	<i>Fine cam S3</i> Yashica EZ Digital 5030		<i>Yashica EZ</i> Digital 5031	<i>Fine cam</i> L3/30/3v/4/4v S4/3R/5R/3L		
RICOH	<i>Caprio</i> RZ1/R1/RR660/RR211 RR630/GR-D G3/3M/3S/4/4W	<i>Caprio</i> GR/R II/X/X100/X8 R1/1v/2/3/4/5/6/7/8/ 30/40/50/RR30/RR530		<i>Caprio</i> GX8/GX/RX G4 wide/RR30 RR230/G600		<i>Caprio</i> R8, R7, R6, R5, R4, R3, R40
CASIO	<i>QVR</i> 61/51/41/40 4/3 <i>EXZ</i> 10/110/120	<i>S1</i> 00/500/600/600D 770/880/10 <i>EXZ</i> 75/70/60/57/55/20/ 50/40/30/5/4/3/500/200/ 600/700/750/1000/9/ 1050/1200SR/10/100/ 1080/110/120/1200/	<i>EXZ</i> 60/70/75/77	<i>EX-P</i> 700/600 XP 700 QV 5700	<i>Exslim Ex</i> M20/1/2 S20/3/2/1 <i>EX-V</i> 7/8	
Panasonic	<i>DMC</i> LC33/43 LS1/80 LZ10/6/7/8	<i>DMC</i> F _x 100/01/07/1/2/30/ 33/36/5/50/520/55/ 7/8/9 F1/7/S20/S3/S5 LS 2	<i>DMC</i> 07/10/12/30/33/50/55 F1/7 LS2/1	<i>DMC</i> LZ1/2 LC80/70/50/20/5	<i>D-snap</i> As10	<i>DMC</i> LX1, LX2, LX3
ETC.	<i>Minox</i> Dc8111 <i>Rollei Prego</i> DP8300/6300 5300/DT3200 <i>Mach power</i> DX-550 <i>Polaroid</i> PDC3370 <i>Praktica</i> DCZ4.3 <i>BenQ DC</i> C40/C50 <i>Toshiba</i> Alegretto 3310	<i>Rollei Prego</i> Dp4200 <i>BenQ DC</i> E53/520/510 <i>Hitachi imaga</i> HDC-531 <i>Leica</i> C-Lux1	<i>To shiba</i> Alegretto 3330 <i>Hyundai</i> DC-4300 <i>Epson L</i> -400/300 <i>Leica</i> C-Lux1/2	<i>Praktica</i> DCZ4.4 <i>Toshiba</i> POR5300 <i>Premire</i> DC2302 3306/5330 <i>Kenko</i> Z510 <i>BenQ DC</i> DC5330/S30 <i>Kocom</i> KDC-330 <i>Hyundai</i> HD-530 <i>Hitachi</i> HDC-331	<i>Che-ez</i> Foxz2 <i>Che-ez</i> moni-me	<i>Leica</i> D-LUX 3, D-LUX 2 <i>Sigma</i> DP-1

如有任何印刷错误及翻译上的误差，望广大用户谅解。产品设计与规格如有更改，恕不另行通知。

www.nereus.com.hk